

Connect to  
Door Control  
(C2160-2, C4160-1,  
C7160-3, C8160-3)


WHITE

BLACK

RED

### SETTING THE CODE SWITCHES

On the C1332-3 Radio Receiver, use a small screwdriver to pry open the hatch covering the code switch, as shown at left. Set the Code Switches of both the transmitters and the receiver exactly the same. Any combination of the 10 small switches can be used. Once the codes have been set, actuate each transmitter to be sure the receiver functions before reassembly of the units.

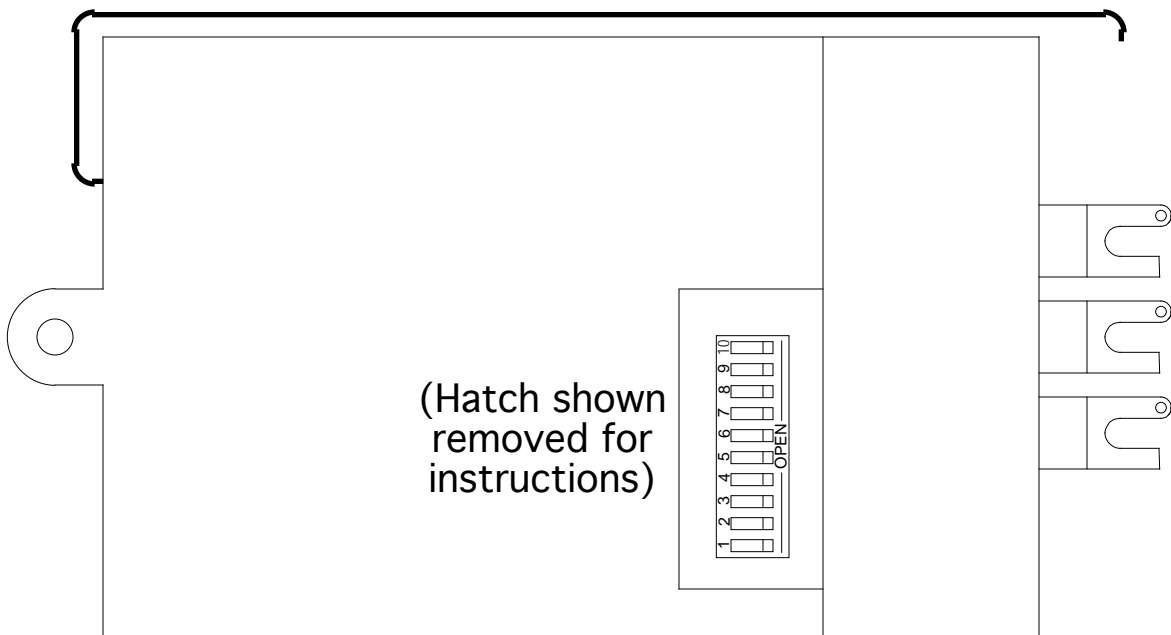

(Hatch shown  
removed for  
instructions)

If the C1334-2 Wireless Handicap Switch Assembly is used, remove the four assembly screws and locate the Code Switch on the circuit board (see other side of page). If the C1342-1 Hand-held Transmitter is used, a small screwdriver can be used to pry the front cover off & expose the battery & Code Switch.

## C1330-1 & C1340-1 Radio Control System Instructions

MAR96 DPH



4242 Baldwin Boulevard  
Corpus Christi, Texas USA 78405  
(800)531-3111 FAX: (800)531-3108  
(361)888-5591 FAX: (361)888-6510

Internet - <http://www.hortondoors.com>