



ADJUST RODS


1. Loosen top and bottom adjusting screws.

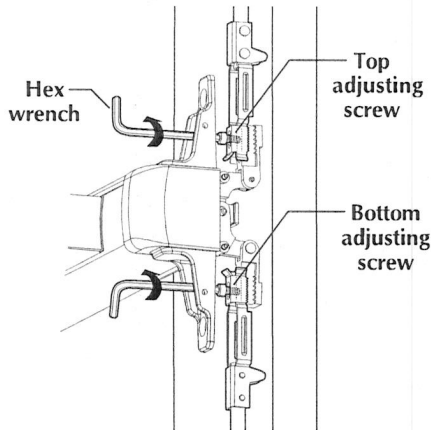


2. Open door and release top latch bolt as shown.

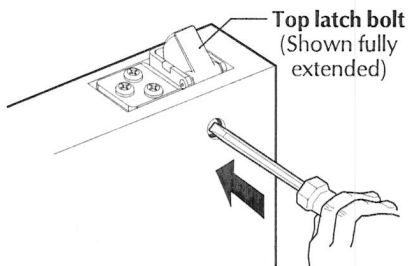

3. Check top latch bolt for deadlocking (latch bolt should not push in).

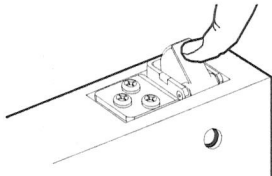


4. With top latch bolt still fully extended and pushbar in full up position (not depressed), tighten top adjusting screw.

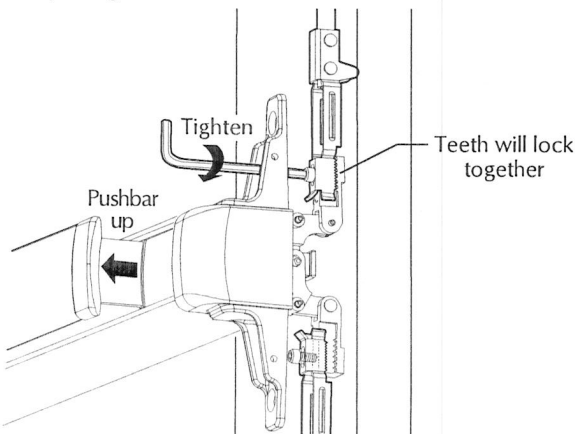


8. Depress pushbar and release.


9. Make sure top latch bolt stays retracted as shown.

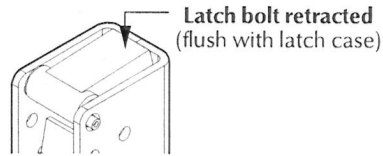

10. With top latch bolt still retracted, push bottom latch bolt up until it clears floor and bottom strike and hold it there.

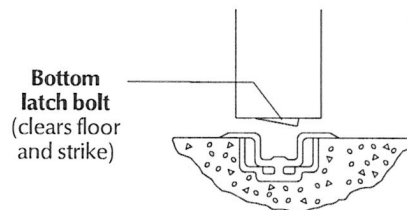

11. Tighten bottom adjusting screw.

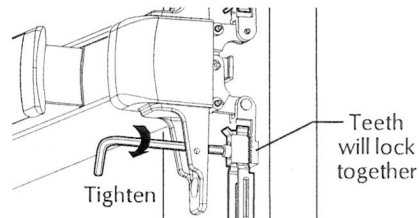

12. Close door and push up on bottom latch bolt to verify it is deadlocked (will not push in).

13. Check device operation by opening and closing door several times from the outside.

Redo adjustment procedure if :

- Top latch bolt is not held retracted
- Bottom latch bolt does not clear floor and bottom strike

14. Install end cap and center case covers.

