


# 873 AC Z1 20 00 IP

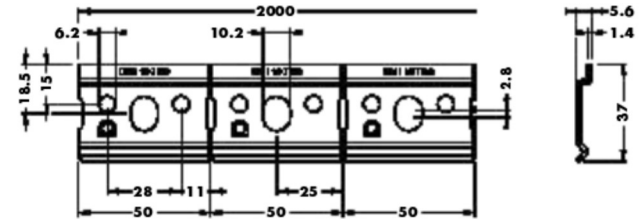


Warning icons: a bell, a red triangle with an exclamation mark, a person falling, and a sign with '562-563'. The URL [www.camar.it/warning](http://www.camar.it/warning) is displayed below.



# 874 AC Z1 20 00 IP



Warning icons: a bell, a red triangle with an exclamation mark, a person falling, and a sign with '562-563'. The URL [www.camar.it/warning](http://www.camar.it/warning) is displayed below.

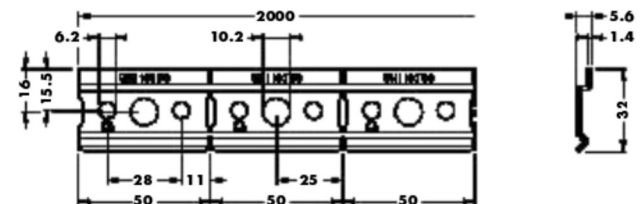

1

2

3

4

5

6

7

8




9


ING

# 875 AC Z1 00 47

			 <a href="http://www.camar.it/warning">www.camar.it/warning</a>
---	--	---	---

Fe

 1000	 24000	 1000
--	--	--

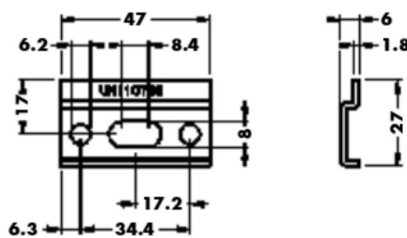


# 875 AC Z1 LA 60

			 <a href="http://www.camar.it/warning">www.camar.it/warning</a>
---	--	---	---

Fe

 800	 19200	 1600
---	--	--

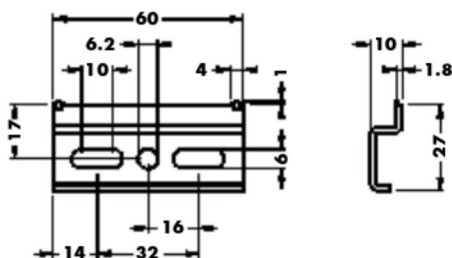


# 875 AC Z1 00 60



[www.camar.it/warning](http://www.camar.it/warning)

Fe

800
 19200
 1600

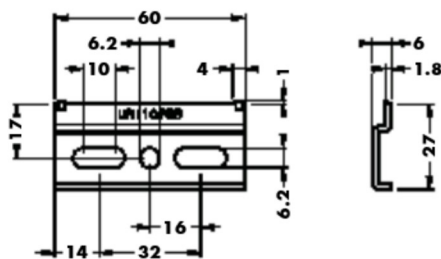

# 875 AC Z1


- 0 1 0 7
  - 0 1 5 7
  - 0 2 0 7
  - 0 2 5 7
  - 0 3 0 7
  - 0 3 5 7
  - 0 4 0 7
  - 0 4 5 7
  - 0 5 0 7
  - 0 5 5 7
  - 0 6 5 7
  - 0 7 0 7
  - 0 7 5 7
  - 0 8 5 7
  - 0 9 5 7
  - 1 1 5 7
- Lmm



[www.camar.it/warning](http://www.camar.it/warning)

Fe

1200

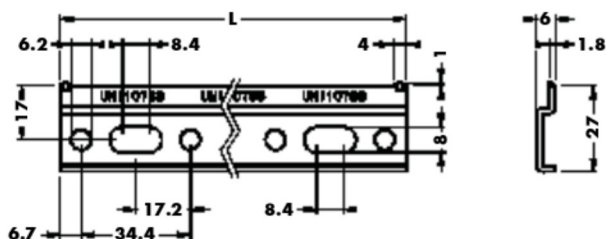

1

2

3

4

5

6

7

8

9


ING

# 875 AC Z1 20 32

Warning icons: fire, exclamation mark, falling object, and a sign with '562-563'. [www.camar.it/warning](http://www.camar.it/warning)

Fe

30 (box icon) 1050 (pallet icon) 150 (truck icon)

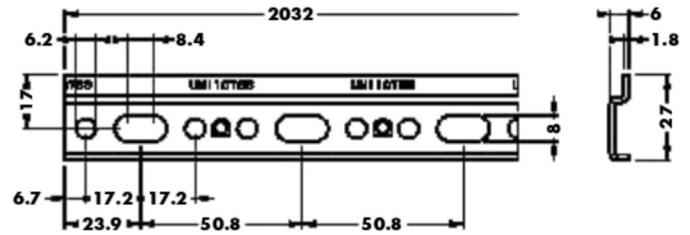

# 875 AC Z1 20 32 IP

Warning icons: fire, exclamation mark, falling object, and a sign with '562-563'. [www.camar.it/warning](http://www.camar.it/warning)

Fe

1000 (pallet icon) 1000 (truck icon)

