18523 SHT 1 OF 4




1351 Rocky Point Drive Oceanside, CA 92056 (323)262-4191 www.trimcohardware.com email:info@trimcobbw.com


**PRODUCT** 

1069L POCKET DOOR PULL LATCHING

## **INSTALLATION INSTRUCTIONS:**


- 1. OUR STANDARD 1069L ASSEMBLY WILL WORK WITH A FRAME/WALL OF UP TO 5 1/2" WIDTH CUSTOMIZED ASSEMBLIES CAN BE MADE FOR WIDTH'S GREATER THAN 5 1/2"- REFERENCE SHEET 4.
- PREPARE DOOR AND FRAME AS INDICATED ON SHEET 2 OR 3 DEPENDING UPON DOOR THICKNESS. (STRIKE PREPARATION IS THE SAME REGARDLESS)
- 3. INSERT DOOR PULL AND INSTALL USING QUANITY FOUR (4) #8X1-5/8" FH PH DRYWALL SCREWS (SUPPLIED)
- 4. INSTALL HANDING SCREW IN APPROPRIATE HOLES AS SHOWN ON THE DRAWING BELOW. IF CLOCKWISE ROTATION IS DESIRED INSTALL SET SCREW IN LOWER HOLE OPPOSITE IF COUNTER-CLOCKWISE IS DESIRED.
- 5. INSTALL STRIKE USING TWO (2) #8X3/4" FH WS (SUPPLIED) THEN TEST UNIT.
- 6. INSTALL LOCK/UNLOCK DECALS AS SHOWN.
- 7. INSTALL SLIDE DECALS AS SHOWN (SEE SHEET 4)

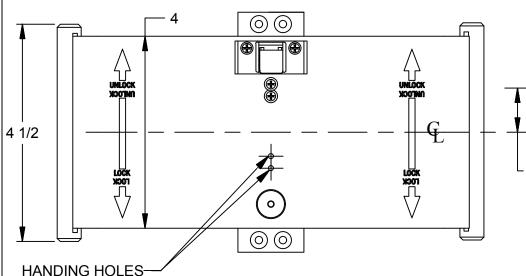

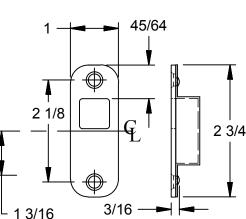

STRIKE & STRIKE BOX

## 1069L POCKET DOOR PULL

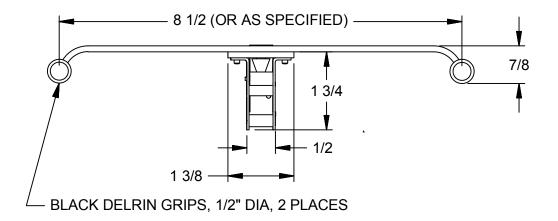

SHEET 2 OF 4 DOOR PREP FOR 1-3/8" WOOD DOOR SHEET 3 OF 4 DOOR PREP FOR 1-3/4" WOOD DOOR AND WIDER


18523 SHT 2 OF 4



1351 Rocky Point Drive Oceanside, CA 92056 (323)262-4191 www.trimcohardware.com email:info@trimcobbw.com

PRODUCT

1069L POCKET DOOR PULL LATCHING

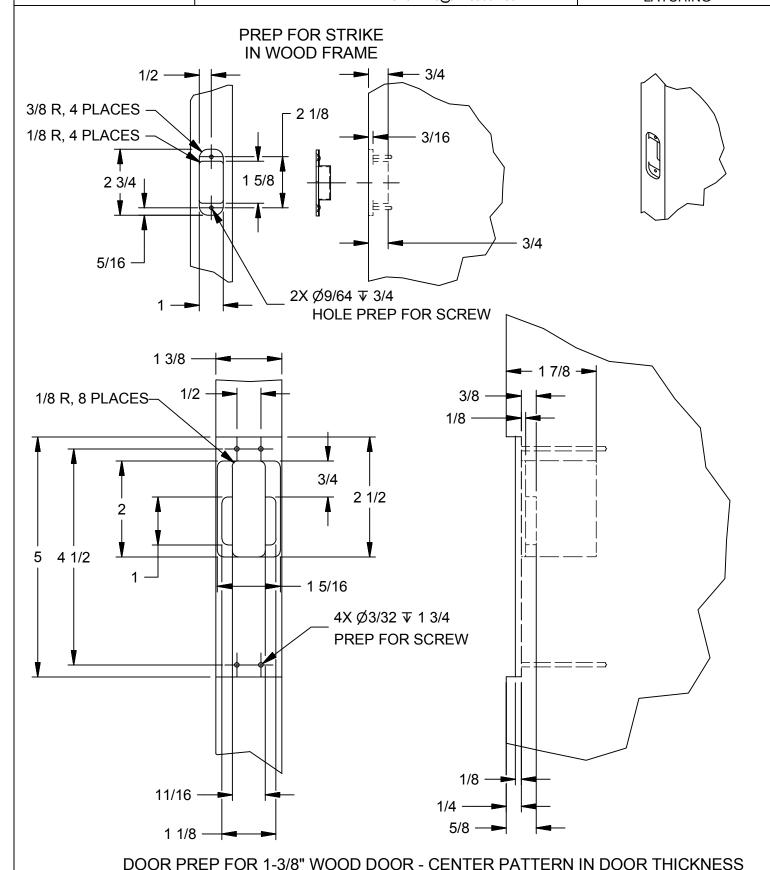


**TEMPLATE NO.** 

18523 SHT 3 OF 4



1351 Rocky Point Drive Oceanside, CA 92056 (323)262-4191 www.trimcohardware.com email:info@trimcobbw.com

1069L POCKET DOOR PULL LATCHING

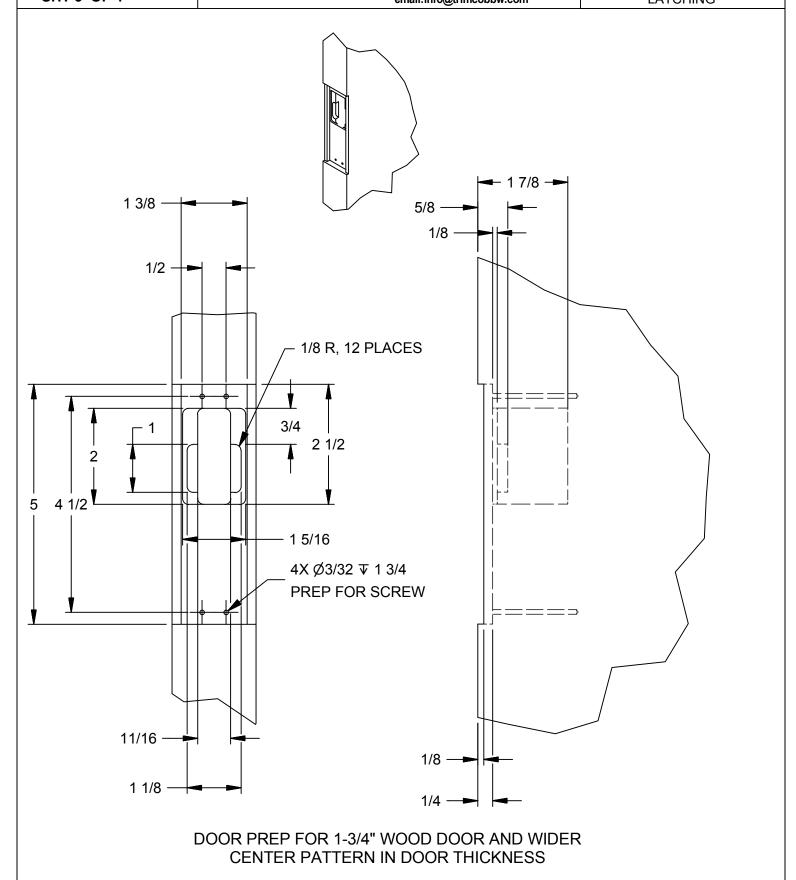

**TEMPLATE NO.** 

18523 SHT 4 OF 4 1351 Rocky Point Drive
Oceanside, CA 92056
(323)262-4191
www.trimcohardware.com
email:info@trimcobbw.com

PRODUCT

1069L POCKET DOOR PULL LATCHING

